



www.bequiet.com/bl099

- EN** » Product information for this fan
- DE** » Produktinformationen zu diesem Lüfter
- FR** » Informations produit pour ce ventilateur
- ES** » Información del producto para este ventilador
- PL** » Informacje produktowe dla tego wentylatora
- NL** » Productinformatie voor deze ventilator
- SE** » Produktinformation för denna fläkt
- RU** » Подробная информация о данном вентиляторе
- TW** » 此風扇的產品資料
- CN** » 此風扇的產品資料
- JP** » この扇風機の商品情報

FR Garantie

5 ans de garantie constructeur pour le client final (uniquement pour un premier achat auprès d'un distributeur be quiet! agréé). La prise en charge de la garantie est assujettie à la fourniture d'une copie de la preuve d'achat auprès d'un distributeur be quiet! agréé. Les manipulations, les modifications de construction de tout type ainsi que les dommages causés par des actions mécaniques extérieures entraînent la perte totale de la garantie. Les conditions détaillées de garantie peuvent être consultées sur le site web www.bequiet.com.
Listan GmbH · Wilhelm-Bergner-Straße 11c · 21509 Glinde · Allemagne
Si vous avez des questions, veuillez nous contacter par mail à l'adresse suivante : service@be-quiet.fr


Installation des chevilles en plastique rigide

1

- FR** Attachez les éléments en plastique rigide par le haut sur le support de fixation. Utilisez l'élément en plastique dur avec le marquage Corner Type B pour le verrouillage du raccord où se trouve le câble du ventilateur. Utilisez les éléments en plastique dur avec le marquage Corner Type A pour les serrures de montage restantes.



- FR** Pour retirer les éléments en plastique rigide, appuyez sur les pattes de verrouillage sur les côtés droit et gauche. Puis tirez l'élément de montage vers le haut.

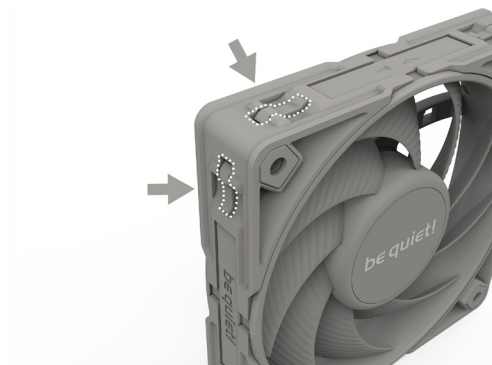

2

- FR** L'interrupteur de vitesse permet de basculer entre la vitesse moyenne, la haute vitesse et la ultra haute vitesse. Pour modifier la vitesse du ventilateur, tirez le commutateur sur la position souhaitée.

| | 120mm | 140mm |
|-----|---------|---------|
| M | 1600rpm | 1100rpm |
| HS | 2500rpm | 1900rpm |
| UHS | 3000rpm | 2400rpm |



3

- FR** Vissez le ventilateur à l'aide des vis fournies.




Installation des éléments anti-vibration

1

FR Les éléments en caoutchouc ainsi que les supports de fixation sont marqués à l'intérieur.

- Lorsque les éléments de montage sont positionnés en face du "L", il y a un interstice de 1 mm entre le cadre du ventilateur et le boîtier, pour une isolation maximale.
- Lorsque les éléments de montage sont positionnés en face du "S", il n'y a aucun espace entre le ventilateur et le boîtier.

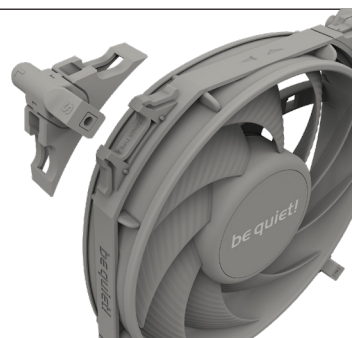

FR Pour enlever les éléments anti-vibration, veuillez suivre les instructions indiquées en page 1.

2

FR Le ventilateur est fixé avec un système de push pins et de joints.



EN WARNING: Do not touch the fan during operation!

DE WARNUNG: Nicht den Lüfter im Betrieb berühren!



be quiet! Limited Warranty »

Per the terms and conditions of this limited warranty as given below, be quiet! warrants its new products to be free of defects resulting from faulty materials and faulty manufacturing for the length of the warranty period.

I. APPLICABILITY

This non-transferable warranty is applicable to newly purchased, previously unopened be quiet! products and is enforceable by only the original consumer purchaser. Proof of purchase is required for warranty service, so should be retained. be quiet! does not provide warranty registration services.

II. WARRANTY PERIOD

For eligible products, parts and labor are warranted for the applicable warranty period from the date of purchase. The applicable warranty period varies by product model, and is identified in your user documentation, on the product package, or as listed below. Should any of these warranty periods differ, the longest specified warranty period will apply. Replaced products will be warranted for the remainder of the original warranty period or thirty days, whichever is longer.

III. EXCLUSIONS

The following are not covered by the warranty:

1. Normal wear and tear.

2. Any product which has been modified without permission from be quiet!, or on which the serial number or warranty sticker has been defaced, modified, or removed.

3. Damage, deterioration or malfunction resulting from:

- Accident, abuse, misuse or improper use, neglect, connection to an improper voltage source, unauthorized product modification, or failure to follow instructions included with the product.
- Fire, water, lightning, or other acts of nature.
- Repair or attempted repair by anyone not authorized by be quiet!.
- Shipping or transport damage (claims must be made with the carrier).
- Any other cause which does not relate to a defect in materials or manufacturing workmanship.

4. Cartons, cases, batteries, cabinets, tapes, accessories or other consumables used with this product.

5. be quiet!, Inc. does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

6. Removal or installation charges.

7. Shipping charges.

8. Any incidental charges.

IV. EXCLUSION OF DAMAGES

be quiet!'s sole obligation and liability under this warranty is limited to the repair or replacement of a defective product at its option. be quiet! shall not, in any event, be liable for any special, incidental, indirect, or consequential damages whatsoever, including but not

limited to loss of profits, revenue, or data (whether direct or indirect), damages resulting from interruption of service and loss of business, or for liability in tort relating to this product or resulting from its use or possession, even if be quiet! has been advised previously of the possibility of such damages.

V. LIMITATIONS OF IMPLIED WARRANTIES

There are no other warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose. The duration of implied warranties is limited to the warranty length specified in Paragraph II.

VI. LOCAL LAW AND YOUR WARRANTY

This warranty gives you specific legal rights. You may also have other rights granted under local law. These rights may vary.

VII. NO OTHER WARRANTY

No be quiet! employee, dealer, or other agent is authorized to make any modification, extension, or addition to this warranty.

VIII. TO OBTAIN TECHNICAL SUPPORT OR WARRANTY SERVICE

Please see your product owner's manual or visit the Online Support section at www.bequiet.com for details and contact information. You will need to provide proof of purchase for warranty service.