







ES Introducción: Gracias por comprar un producto be quiet! Las siguientes instrucciones le guiarán a través del proceso de instalación. Si encuentra algún problema durante la instalación, póngase en contacto con nuestro servicio de atención al cliente mediante correo electrónico en service@bequiet.com. Tenga en cuenta que be quiet! no puede aceptar la responsabilidad por los daños causados por problemas de compatibilidad.

Garantía :

- 3 años de garantía del fabricante para el consumidor final a partir de la fecha de compra (sólo para compra original en distribuidores autorizados be quiet!)
- Sólo se podrán ejercer los derechos de la garantía presentando una copia del comprobante de compra expedido por un distribuidor autorizado de be quiet!
- La manipulación de cualquier tipo, las modificaciones estructurales de cualquier tipo y los daños por influencias mecánicas externas provocarán la pérdida total de la garantía
- Los términos y condiciones íntegros de la garantía se pueden consultar en la página web www.bequiet.com dentro de la sección de servicio técnico / condiciones de la garantía

Listan GmbH · Wilhelm-Bergner-Straße 11c · 21509 Glinde Germany. Correo electrónico del servicio de atención service@bequiet.com

CONTENIDO

| | Nombre del componente | Cantidad |
|---|--|----------|
| ① |  Ventiladores Light Wings de be quiet! | 1 / 3 |
| ② |  ARGB Hub | 0 / 1 |
| ③ |  Cinta de doble cara | 0 / 1 |
| ④ |  Tornillos del ventilador | 4 / 12 |
| ⑤ |  Tornillos de fijación para el ARGB Hub | 0 / 4 |
| ⑥ |  Cable ARGB | 0 / 1 |

Instalación del pack sencillo Light Wings


①

Destornille el ventilador (1) usando los tornillos del ventilador (4).



②


Conecte el conector ARGB del ventilador (1) con el conector ARGB de 5 V de la placa base. Para ello, debe apagar su sistema antes de la instalación.

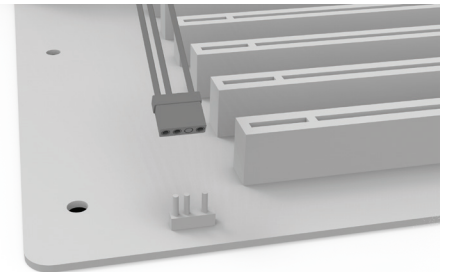

Instalación del pack triple Light Wings


①

Destornille el ventilador (1) usando los tornillos del ventilador (4).

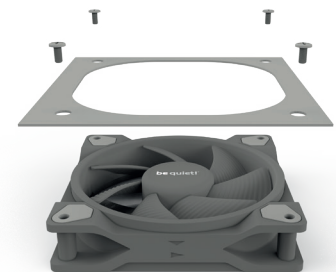


②

El ARGB Hub (2) le permite sincronizar hasta seis dispositivos ARGB de 5 V directamente a través de su placa base. Para ello, debe apagar su sistema antes de la instalación. A continuación, conecte el conector del ventilador (1) con uno de los seis cabezales de LED.

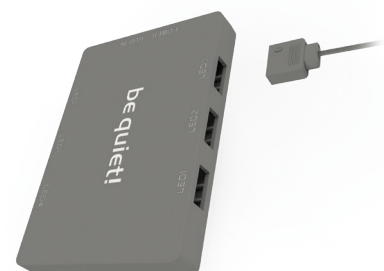


3

Use el cable ARGB (6) para conectar el conector RGB IN del ARGB Hub (2) con el conector ARGB de 5 V de la placa base.

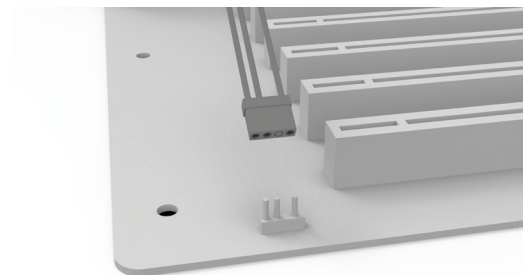

4

Conecte el cable SATA del ARGB Hub (2) con un cabezal SATA de su fuente de alimentación. A continuación, instale en la caja el ARGB Hub (2) con los tornillos (5) o la cinta de doble cara (3).

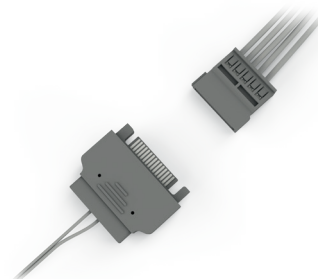

be quiet! Limited Warranty »

Per the terms and conditions of this limited warranty as given below, be quiet! warrants its new products to be free of defects resulting from faulty materials and faulty manufacturing for the length of the warranty period.

I. APPLICABILITY

This non-transferable warranty is applicable to newly purchased, previously unopened be quiet! products and is enforceable by only the original consumer purchaser. Proof of purchase is required for warranty service, so should be retained. be quiet! does not provide warranty registration services.

II. WARRANTY PERIOD

For eligible products, parts and labor are warranted for the applicable warranty period from the date of purchase. The applicable warranty period varies by product model, and is identified in your user documentation, on the product package, or as listed below. Should any of these warranty periods differ, the longest specified warranty period will apply. Replaced products will be warranted for the remainder of the original warranty period or thirty days, whichever is longer.

III. EXCLUSIONS

The following are not covered by the warranty:

1. Normal wear and tear.
2. Any product which has been modified without per-

mission from be quiet!, or on which the serial number or warranty sticker has been defaced, modified, or removed.

3. Damage, deterioration or malfunction resulting from:
 - Accident, abuse, misuse or improper use, neglect, connection to an improper voltage source, unauthorized product modification, or failure to follow instructions included with the product.
 - Fire, water, lightning, or other acts of nature.
 - Repair or attempted repair by anyone not authorized by be quiet!.
 - Shipping or transport damage (claims must be made with the carrier).
 - Any other cause which does not relate to a defect in materials or manufacturing workmanship.
4. Cartons, cases, batteries, cabinets, tapes, accessories or other consumables used with this product.
5. be quiet!, Inc. does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
6. Removal or installation charges.
7. Shipping charges.
8. Any incidental charges.

IV. EXCLUSION OF DAMAGES

be quiet!'s sole obligation and liability under this warranty is limited to the repair or replacement of a defective product at its option. be quiet! shall not, in any event, be liable for any special, incidental, indirect, or consequential damages whatsoever, including but not limited to loss of profits, revenue, or data (whether direct or indirect), damages resulting from interruption of service

and loss of business, or for liability in tort relating to this product or resulting from its use or possession, even if be quiet! has been advised previously of the possibility of such damages.

V. LIMITATIONS OF IMPLIED WARRANTIES

There are no other warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose. The duration of implied warranties is limited to the warranty length specified in Paragraph II.

VI. LOCAL LAW AND YOUR WARRANTY

This warranty gives you specific legal rights. You may also have other rights granted under local law. These rights may vary.

VII. NO OTHER WARRANTY

No be quiet! employee, dealer, or other agent is authorized to make any modification, extension, or addition to this warranty.

VIII. TO OBTAIN TECHNICAL SUPPORT OR WARRANTY SERVICE

Please see your product owner's manual or visit the On-line Support section at www.bequiet.com for details and contact information. You will need to provide proof of purchase for warranty service.